
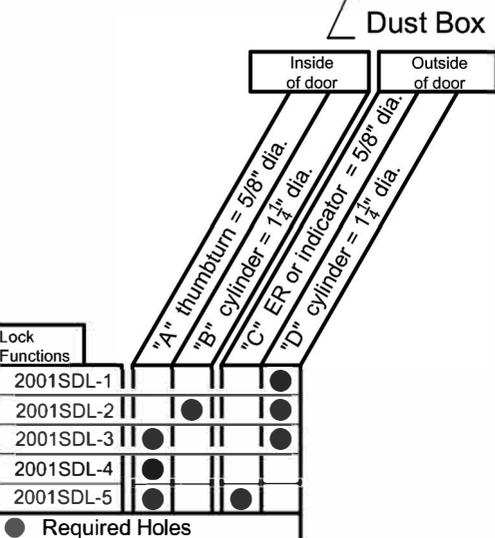


INSIDE OF DOOR

OUTSIDE OF DOOR

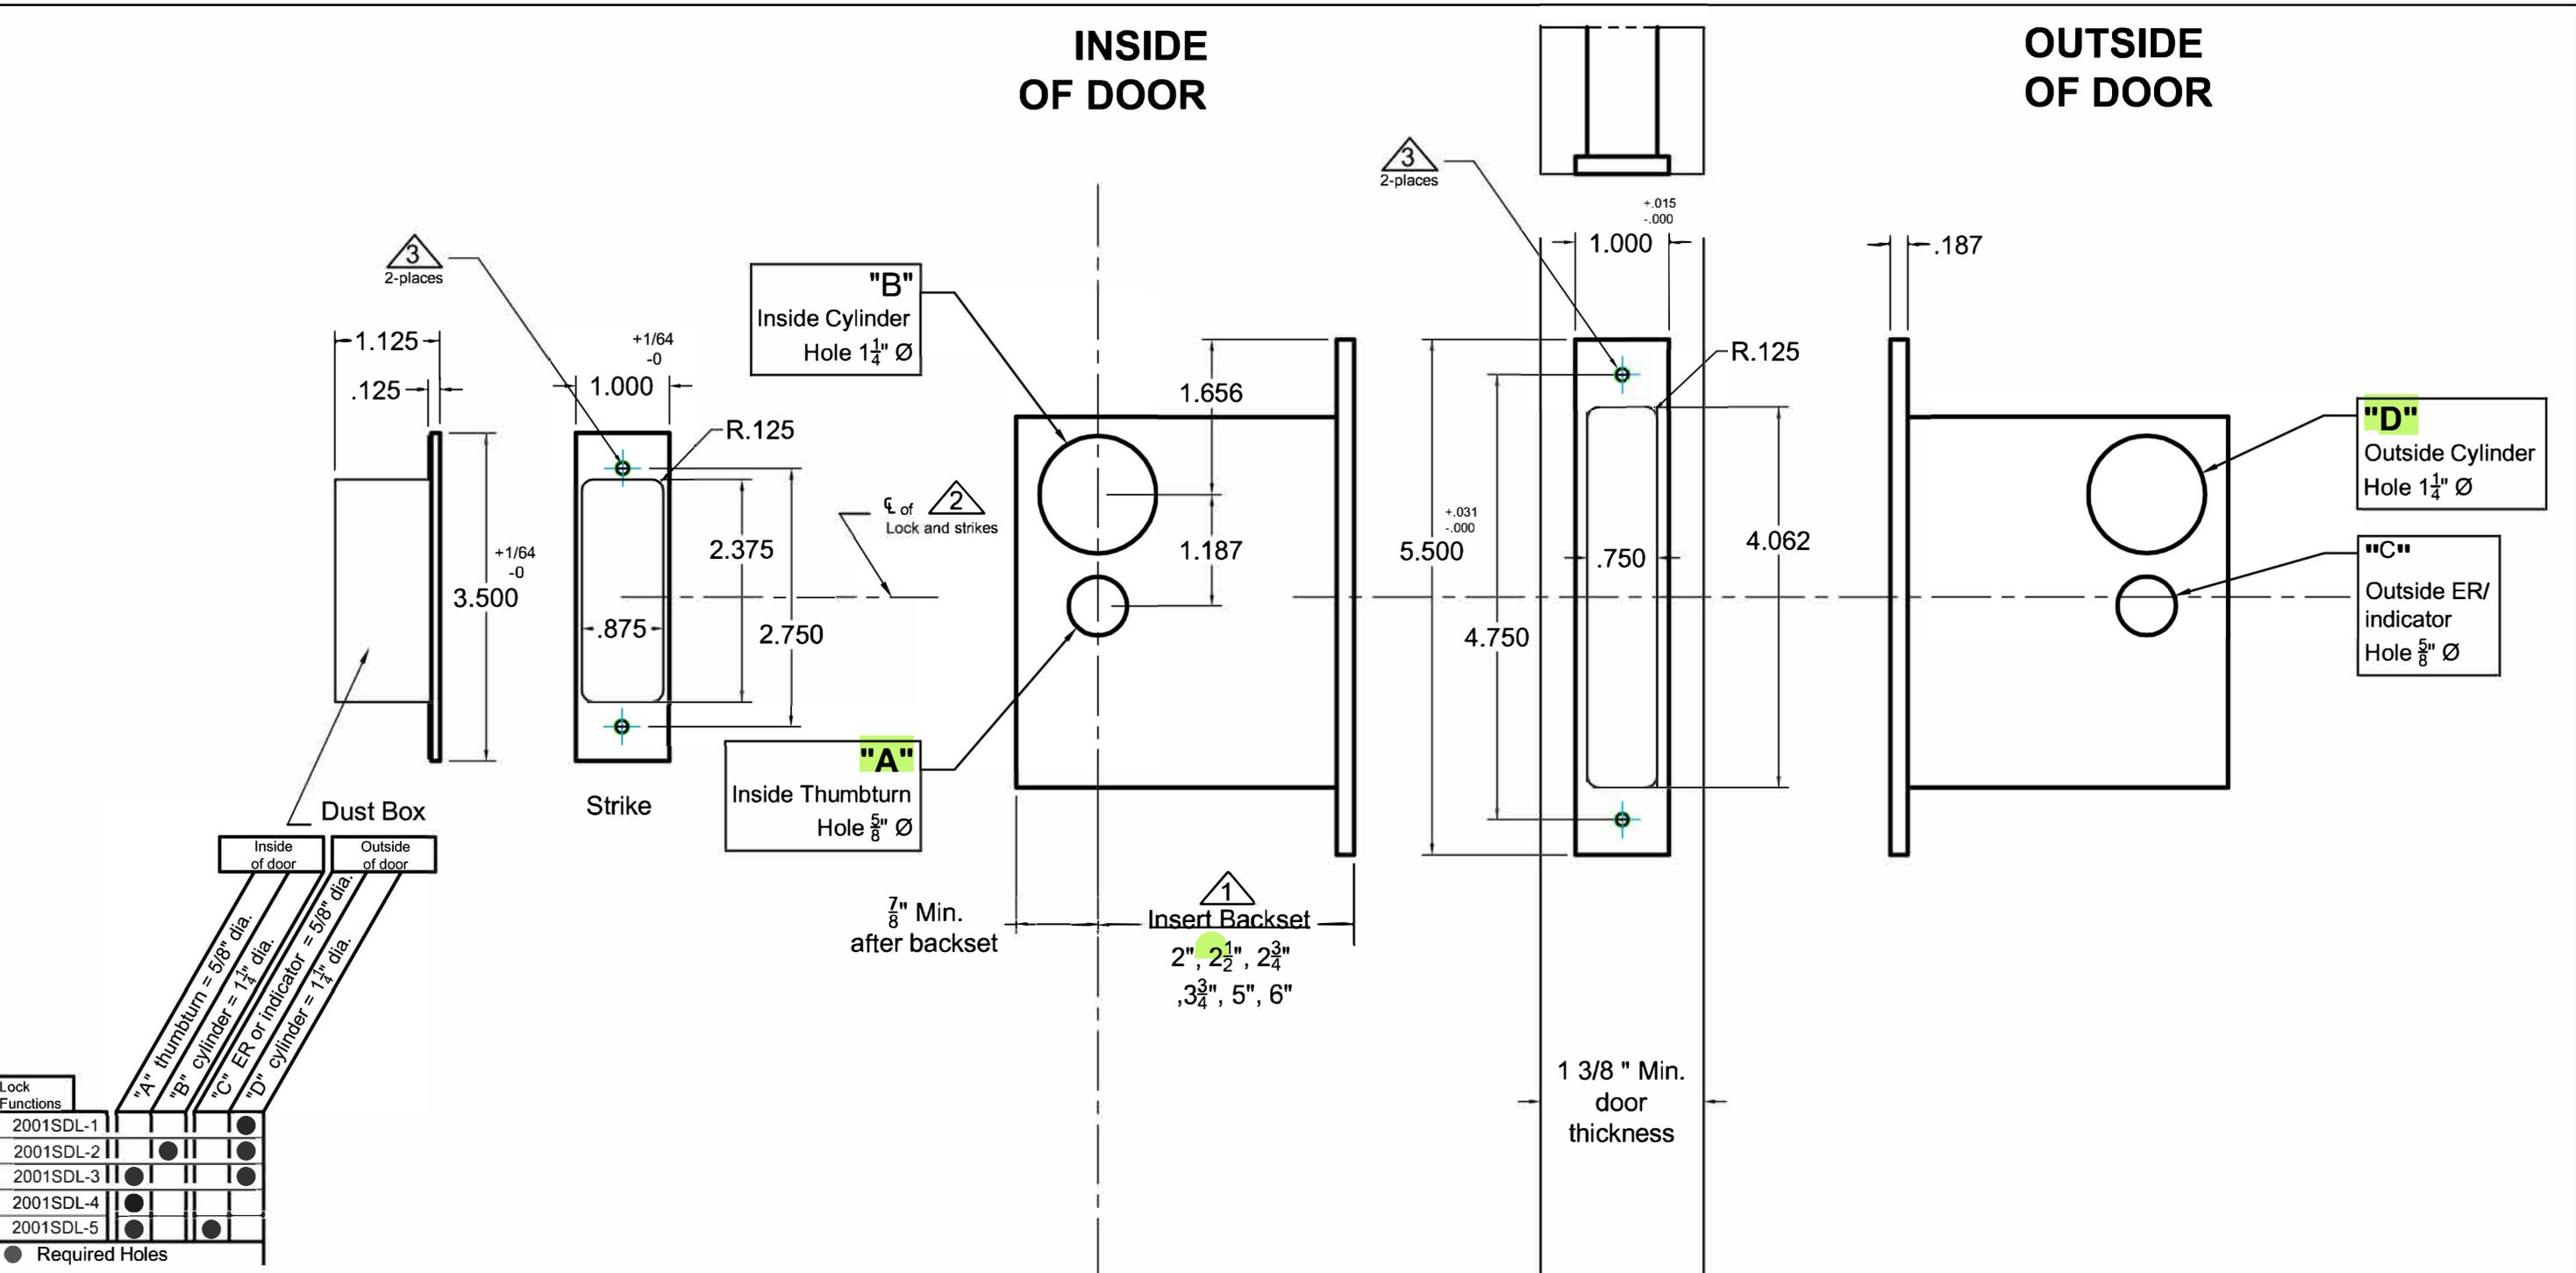

- Notes:**
- ▲ Insert backset here 2", 2 1/2", 2 3/4", 3 3/4", 5", 6"
 - ▲ Centerline of strike and front are the same.
 - ▲ Prep for #8 wood or 8-32 machine screws.

- Additional Notes:**
- a) **Responsibility:** Door and frame manufacturers are responsible for providing adequate construction or re-inforcement for proper installation of hardware shown.
 - b) See catalog / spec sheets and template #T-ALH.2001SDL.LO for additional lock details

Standard 2001SDL- Lock Only-
All Backsets

T-ALH.2001SDL.LO