


# INSIDE OF DOOR

# OUTSIDE OF DOOR

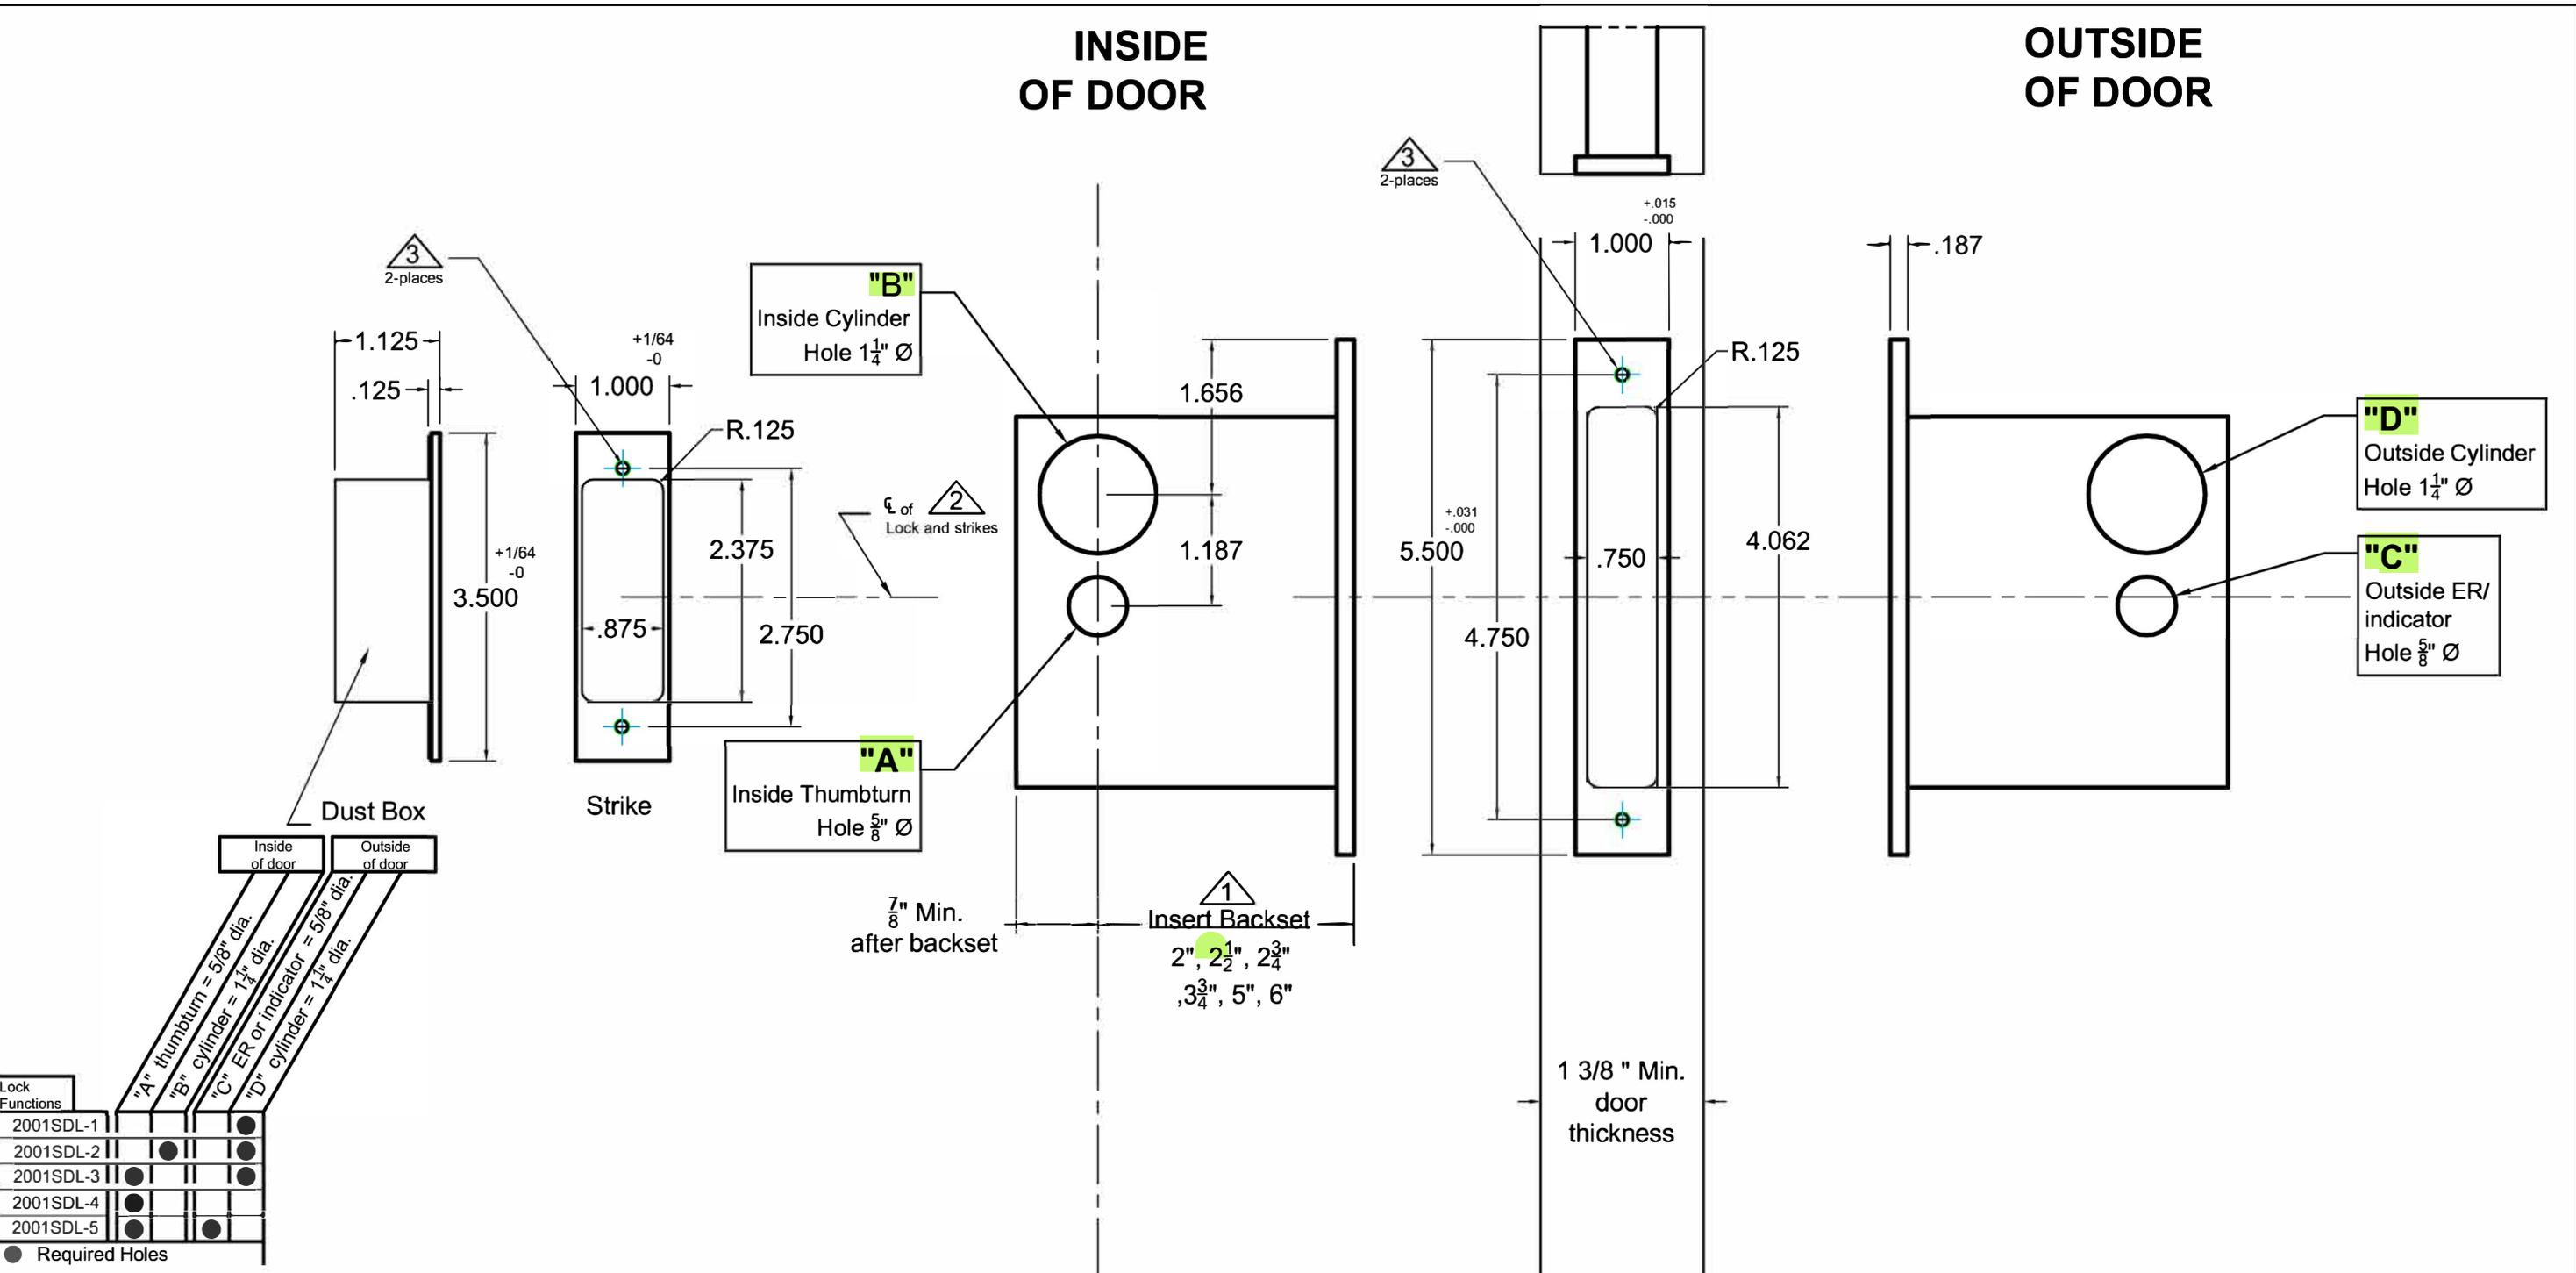

- Notes:**
- ▲ Insert backset here 2", 2 1/2", 2 3/4", 3 3/4", 5", 6"
  - ▲ Centerline of strike and front are the same.
  - ▲ Prep for #8 wood or 8-32 machine screws .

- Additional Notes:**
- a) **Responsibility:** Door and frame manufacturers are responsible for providing adequate construction or re-inforcement for proper installation of hardware shown.
  - b) See catalog / spec sheets and template #T-ALH.2001SDL.LO for additional lock details

Standard 2001SDL- Lock Only- All Backsets

T-ALH.2001SDL.LO