
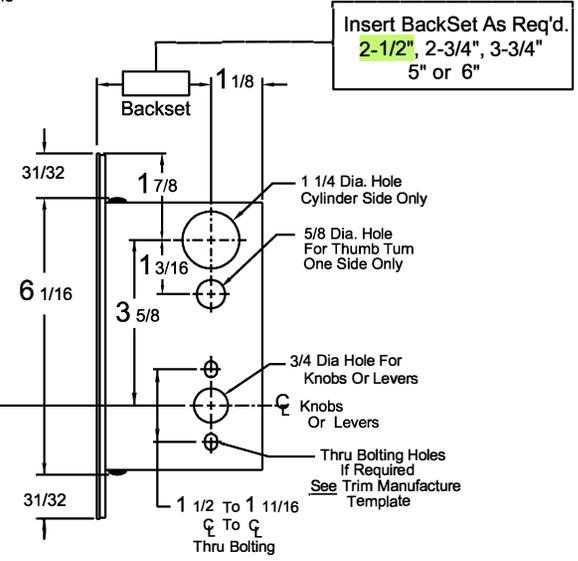
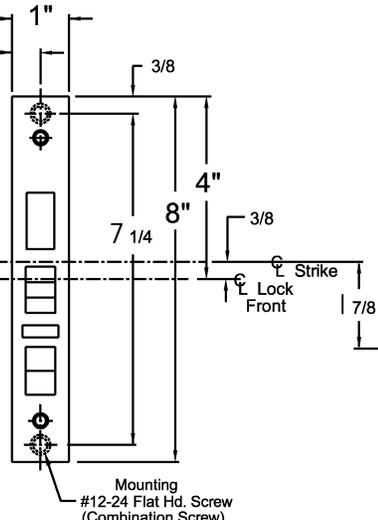
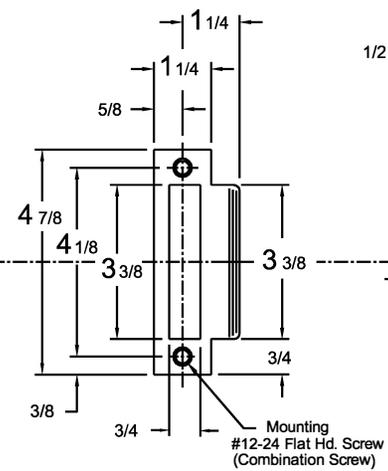
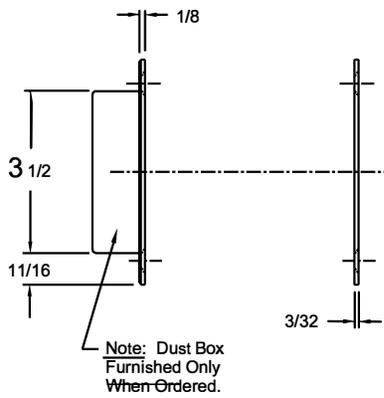
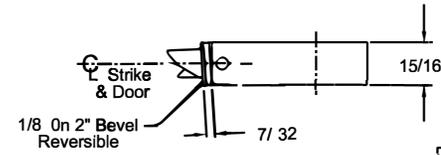


9000 Series

Mortise Lock Installation Template
All BackSets

9025	9045	9022	9024	9039	9001	9002	9003
	9056	9042	9034				
	9059		9048				
			9067				

Find Catalog Numbers Which Will Show Cutouts For Functions Desired. Refer To Composite Template Above For Locations And Sizes Of Holes.

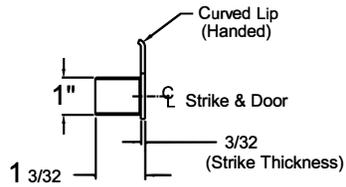

Insert BackSet As Req'd.
2-1/2", 2-3/4", 3-3/4"
5" or 6"

Note: Dust Box Furnished Only When Ordered.

LEVER x LEVER / KNOB x KNOB

9000 SERIES

Responsibility
Door And Frame Manufactures Are Responsible For Providing Adequate Construction Or Re-Reinforcement For Proper Installation Of Hardware Shown.

DWG. NO. **9000LXL-TEMP** REV 11/6/08