


Functions	A	B	C	D	E	F
9100ADL	●			●		
9122	●		●	●		●
9122ARL	●		●	●		●
9124	●	●		●		●
9124ARL		●		●		●
9125	●			●		
9125ARL	●			●		
9134	●	●		●		●
9139	●	●		○		●
9139ARL	●	●		○		●
9140	●			●		●
9142	●		●	●		●
9143	●			●		●
9143E	●			●		●
9144	●			●		●
9144E	●			●		●
9145	●			●		●
9145S	●		●	●		●
9146	●			●		●
9148	●			●		●
9149	●			●		●
9153	●	●		●		●
9156			●	○		●
9158	○			○		○
9159	●			○		○
9160	○			○		○
9167	●	●		●		●
9169	●	●		●		●

(No strike needed)

● Required Holes
○ Optional Holes

INSIDE
OF DOOR

OUTSIDE
OF DOOR

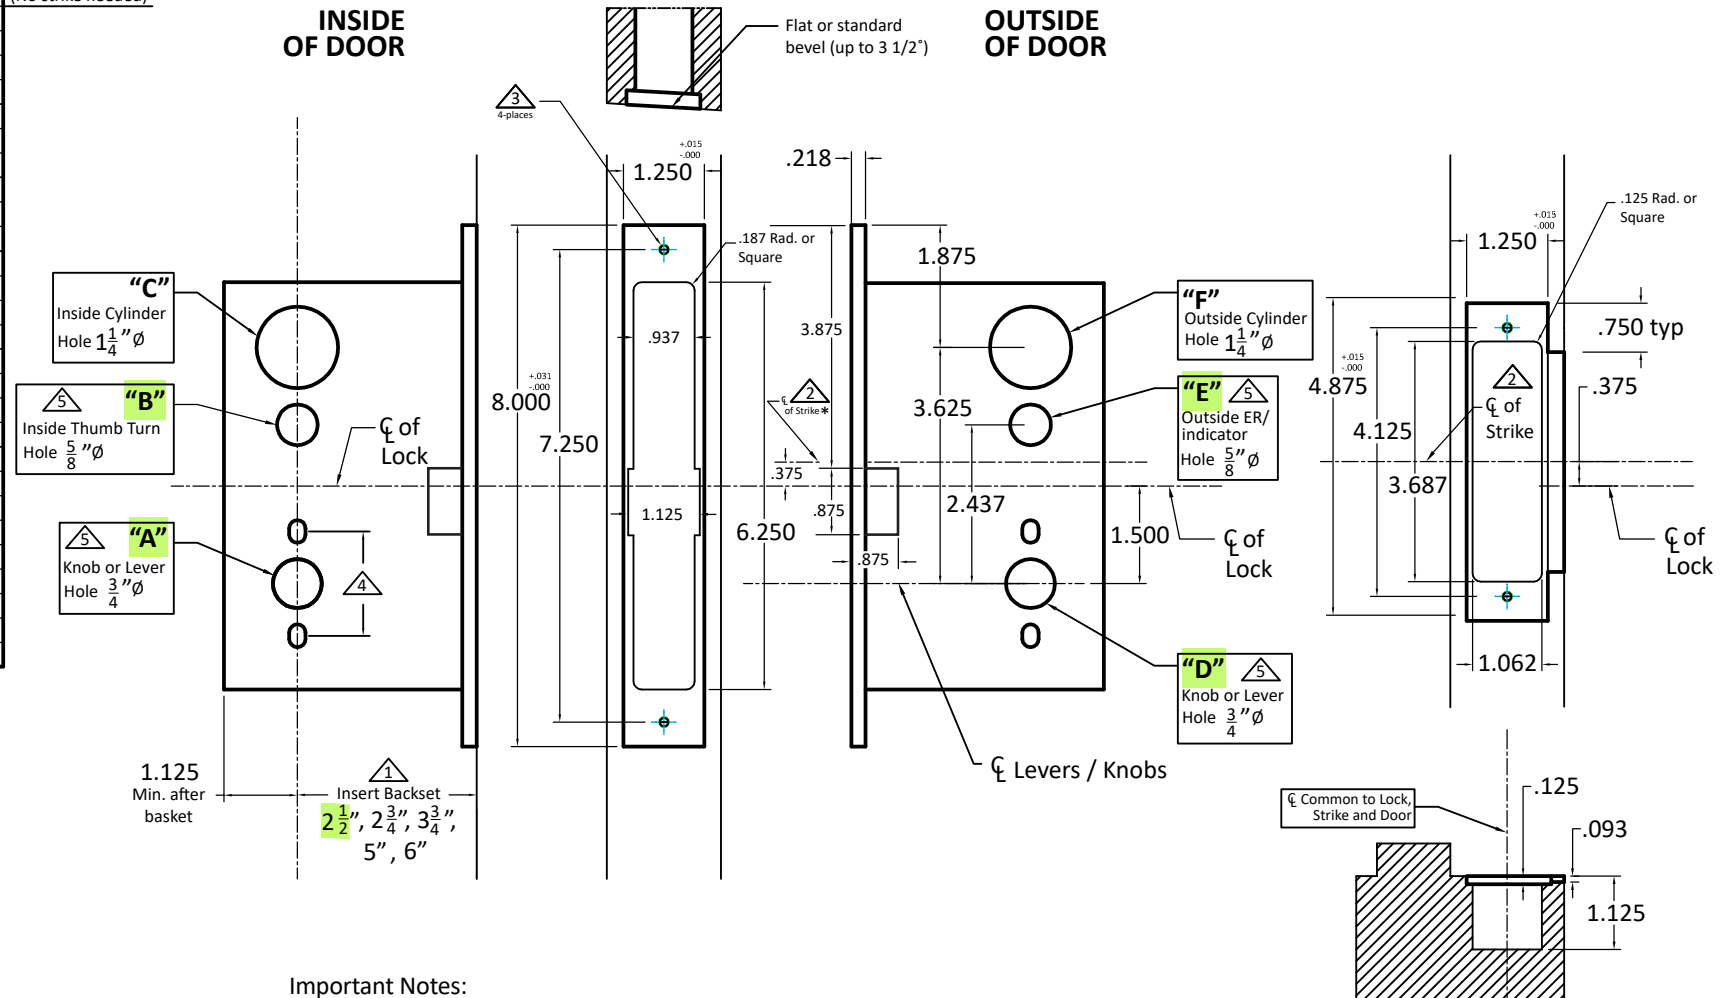

Important Notes:

- ① Insert backset here $2\frac{1}{2}"$, $2\frac{3}{4}"$, $3\frac{3}{4}"$, 5", 6".
- ② ASA strike mounted $\frac{3}{8}"$ ABOVE centerline of lock.
- ③ Prep for #12 wood or 12-24 machine screws (lock and strike).
- ④ Through-bolting holes **ONLY** if required. See trim manufacturers' standard template for details.
Accurate locks accommodate $1\frac{1}{2}"$ to $1\frac{11}{16}"$ center to centers and up to $\frac{1}{4}"$ dia. post.
If there are any additional questions about through-bolting, please contact us.
- ⑤ Knob/Lever, Thumb Turn, and ER holes may vary from different trim manufacturers.
Please refer to their templates to confirm dimensions.

Additional Notes:

- a) **Responsibility:** Door and frame manufacturers are responsible for providing adequate construction or re-inforcement for proper installation of hardware shown.
- b) Please contact us for double lipped template if needed.
- c) See spec sheets for additional lock details.

ACCURATE
LOCK & HARDWARE
AMERICAN CRAFTED SINCE 1972

Standard 9100 Lever x Lever or
Knob x Knob Template. All backsets

T-ALH.9100.LL