


Functions	A	B	C	D	E	F
9100ADL	●		●	●		
9122	●			●		
9124	●	●		●	●	●
9124RL	●	●		●	●	●
9125	●			●		
9125RL	●			●		
9134	●	●		●		●
9139	●	●		●	○	
9142	●		●	●	●	●
9143	●	●		●	●	●
9143E	●	●		●	●	●
9144	●	●		●	●	●
9144E	●	●		●	●	●
9145	●			●	●	●
9145S	●		●	●	●	●
9146	●	●		●	●	●
9148	●	●		●	●	●
9149	●	●		●	●	●
9153	●	●		●	●	●
9149	●	●		●	●	●
9156	●			●	●	●
9158	●		●	●	●	●
9159	●			●	●	●
9160	●	●		●	●	●
9167	●	●		●	●	●
9169	●	●		●	●	●

(no strike needed)

INSIDE OF DOOR

OUTSIDE OF DOOR

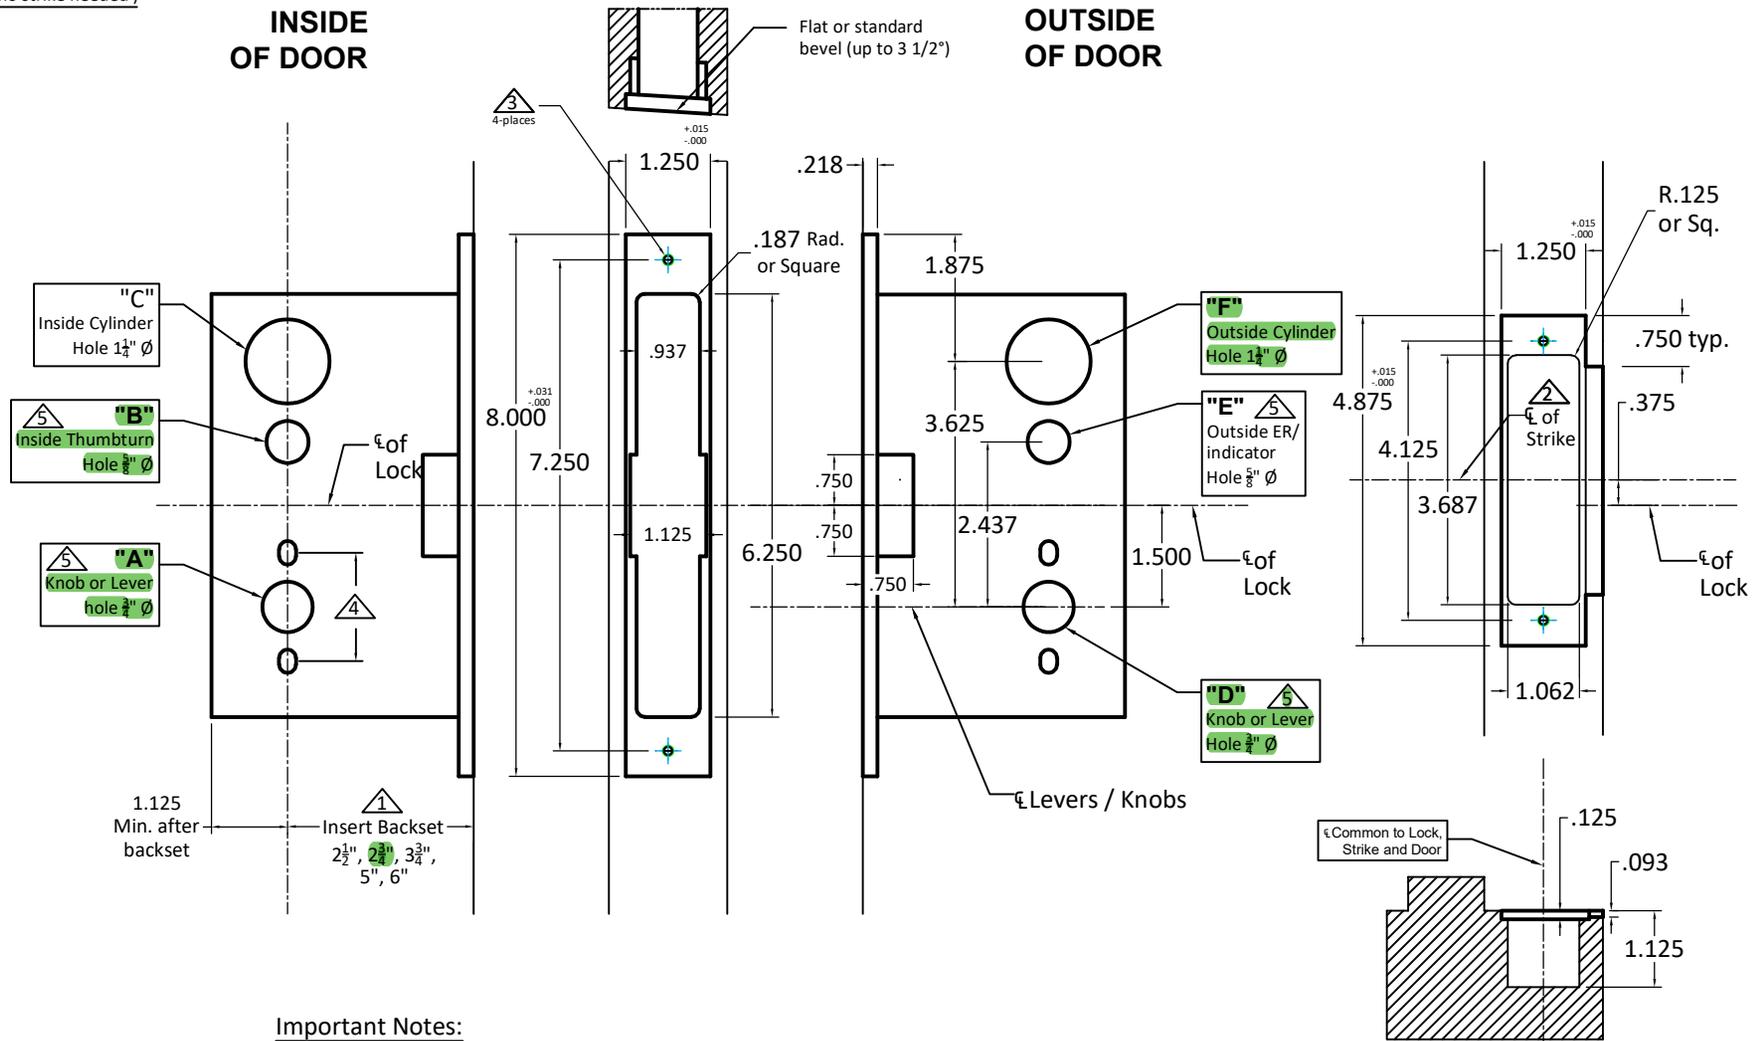

Important Notes:

- ① Insert backset here 2 1/2", 2 3/4", 3 3/4", 5", 6"
- ② ASA strike mounted 3/8" ABOVE centerline of lock
- ③ Prep for #12 wood or 12-24 machine screws (Lock and Strike)
- ④ Thru bolting holes **ONLY** if required. See trim manufacturers standard template for details.

Accurate lock's accommodates 1 1/2" to 1 11/16" center to centers and up to 1/4" dia. post.

If there are any additional questions about the thru-bolting, please contact our office.

- ⑤ Knob/Lever, Thumbturn and ER holes may vary from different trim manufacturers. Please refer to their templates to confirm these dimensions.

Additional Notes:

- a) **Responsibility:** Door and frame manufacturers are responsible for providing adequate construction or re-inforcement for proper installation of hardware shown.
- b) Please contact us if a double lip strike is needed - for a proper template
- c) See catalog / spec sheets for additional lock details



Standard 9100 Lever x Lever or Knob x Knob Template All Backsets

T-ALH.9100.LL