


# INSIDE OF DOOR

# OUTSIDE OF DOOR

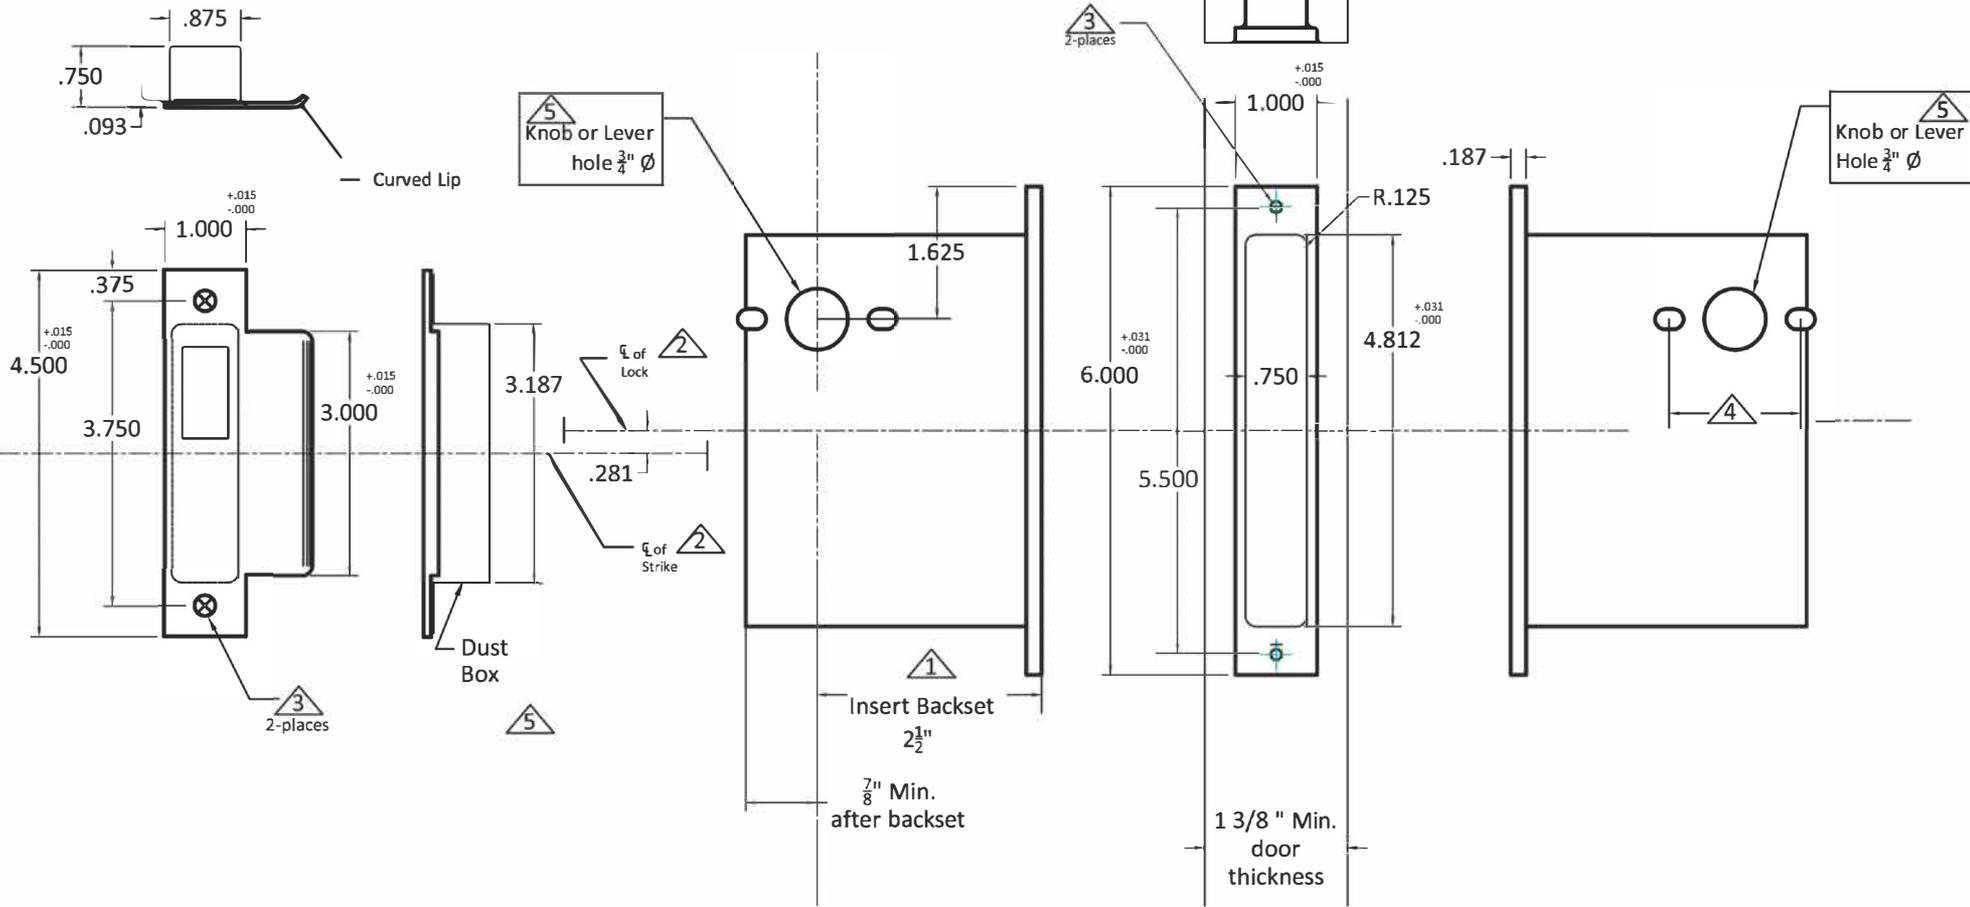

### Notes:

- △ Insert backset here 2 1/2"
- △ Centerline of strike is 3/32" lower than Centerline of front.
- △ Prep for #8 wood or 8-32 machine screws.
- △ Through-bolting holes **ONLY** if required. See trim manufacturers standard template for details.  
Accurate lock's accommodates 1 1/2" to 1 11/16" center to centers and up to 1/4" dia. post.  
**IMPORTANT: Through-bolting holes only apply to 2 1/2" and 2 3/4" backset locks (there is no through-bolting on the 2" backset version)**
- △ Knob / Lever holes may vary from different trim manufacturers. Please refer to their templates to confirm these dimensions.

### Additional Notes:

- a) **Responsibility:** Door and frame manufacturers are responsible for providing adequate construction or re-inforcement for proper installation of hardware shown.
- b) See Spec.9825 for additional details.



ACCURATE  
LOCK & HARDWARE  
AMERICAN CRAFTED SINCE 1972