



INSIDE DOOR EDGE OUTSIDE DOOR EDGE


DOOR TEMPLATE

SERIES HLL/HLT
LEVER LATCH

TRIM SET - RD
2 3/8" BACKSET

FUNCTION:
C - PASSAGE

NOTE:
"A" = Faceplate width of
1" or 1 1/8" depending on
order.

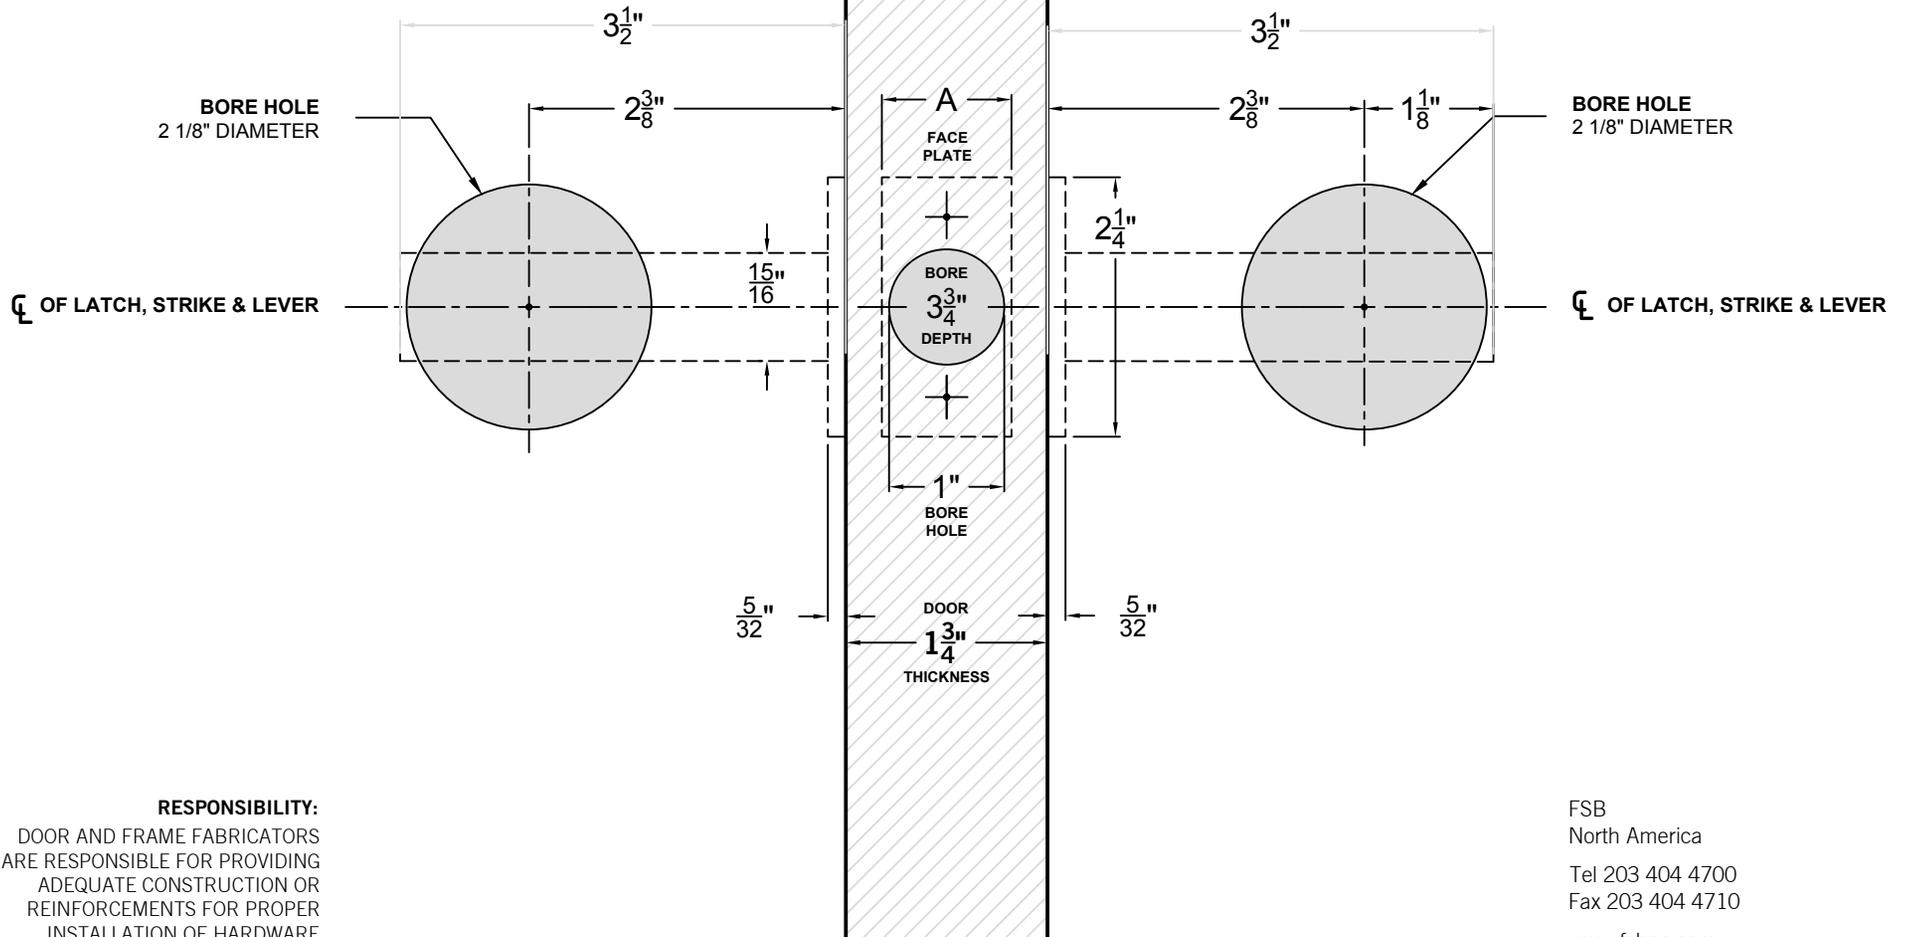

RESPONSIBILITY:

DOOR AND FRAME FABRICATORS
ARE RESPONSIBLE FOR PROVIDING
ADEQUATE CONSTRUCTION OR
REINFORCEMENTS FOR PROPER
INSTALLATION OF HARDWARE

FSB
North America
Tel 203 404 4700
Fax 203 404 4710
www.fsbna.com
info@fsbna.com


NOTE:
BACKSET MEASURED FROM
CENTER OF DOOR EDGE

**STRIKE/DUST BOX DETAIL
FOR WOOD DOORS/FRAMES**


**SERIES HLL, MLL AND KLL LATCHES
T-STRIKE #HLL 1001**

NOTE: STANDARD LIP TO CENTER = 1 1/4" (T1)

T2 = 1"; T3 = 1 1/8"; T4 = 1 3/8";
T5 = 1 1/2"; T6 = 1 3/4"; T7 = 2";
T8 = 2 1/4"; T9 = 2 1/2";
T10 = 2 3/4"; T11 = 3"

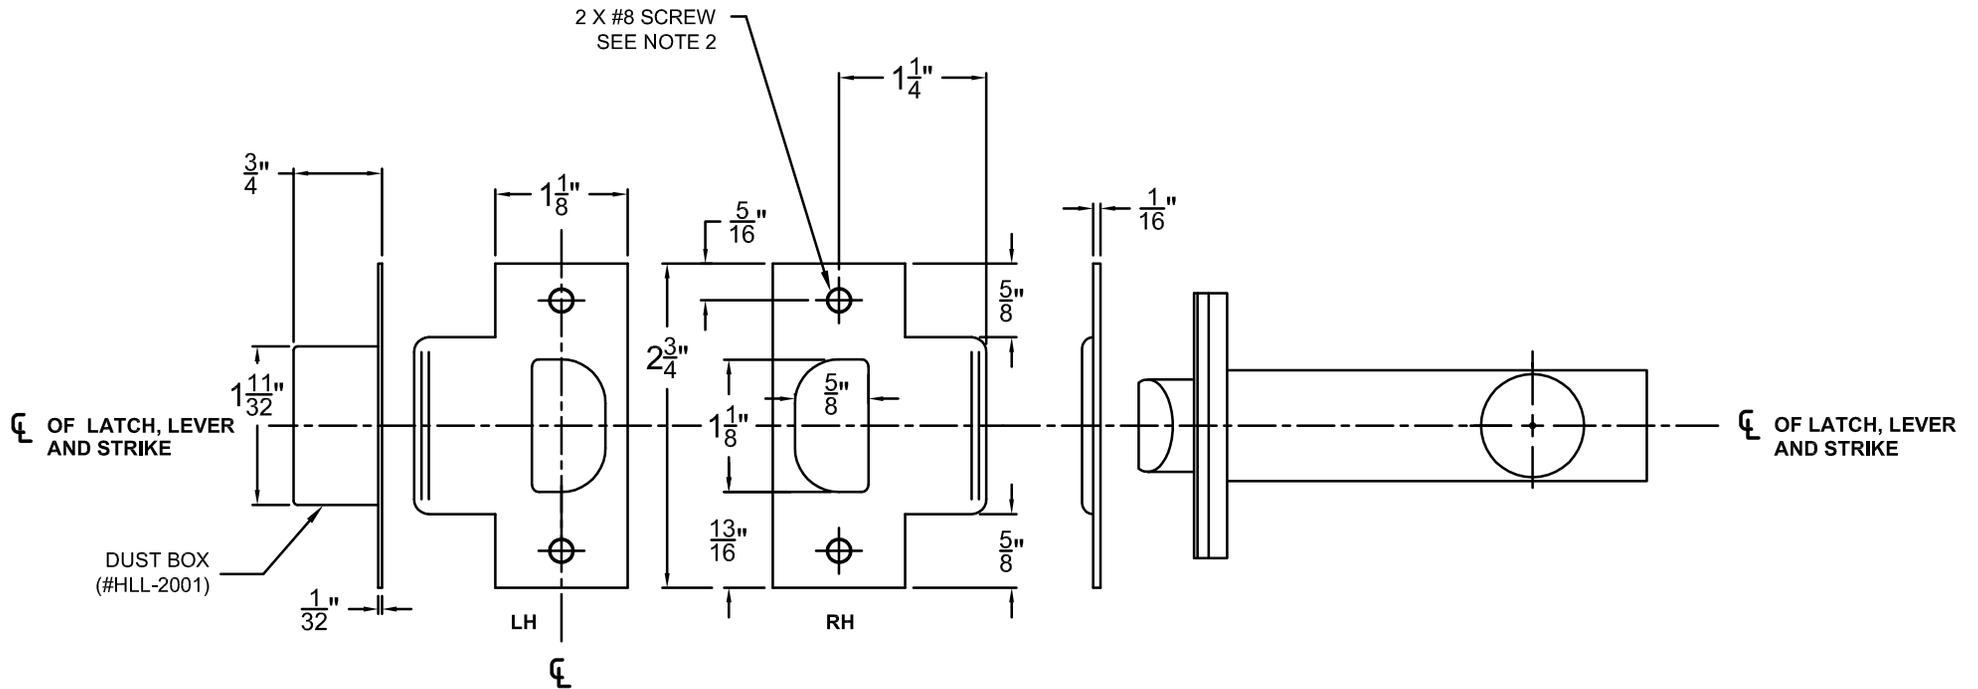

COMMON FOR
LATCH, STRIKE
AND DOOR

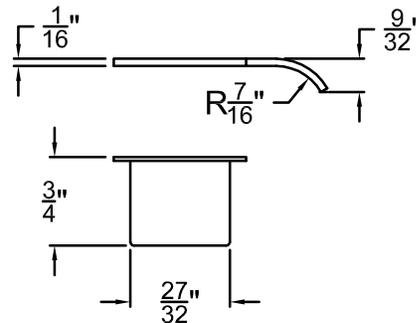

NOTES:

1. STRIKE FITS ANSI A115.3 STANDARDS.
2. DRILL FOR #8 WOOD SCREW, TWO PLACES (FLAT HD, COMBINATION SCREWS ARE SUPPLIED).
3. DOOR AND FRAME FABRICATORS ARE RESPONSIBLE FOR PROVIDING ADEQUATE CONSTRUCTION OR REINFORCEMENT FOR PROPER INSTALLATION OF HARDWARE.

FSB
North America

Tel 203 404 4700
Fax 203 404 4710

www.fsbna.com
info@fsbna.com