

INSIDE

DOOR
EDGE

OUTSIDE



DOOR
EDGE

DOOR
EDGE

DOOR TEMPLATE
SERIES SML \ SMT - STANDARD
TRIM SET - RA, RD, RM, RS

2 3/4" BACKSET

FUNCTION:
B - DORMITORY
D - HOTEL
H - ENTRY
K - APARTMENT

CYLINDER HOLE
1 1/4" DIAMETER
DRILL ONLY IF CYLINDER
IS ON THIS SIDE

CL OF ANSI STRIKE
CL OF LOCK

THROUGH BOLT HOLE
3/8" DIAMETER
CL OF LEVER / KNOB

LEVER / KNOB HOLE
7/8" DIAMETER
DRILL ONLY IF LEVER / KNOB
IS ON THIS SIDE

THROUGH BOLT HOLE
3/8" DIAMETER

FSB
North America
Tel 203 404 4700
Fax 203 404 4710

www.fsbna.com
info@fsbna.com

FUNCTIONS:

REFER TO COMPOSITE TEMPLATE
FOR LOCATIONS AND DIMENSIONS
OF ALL CUTOUT REQUIREMENTS
FOR SPECIFIC FUNCTIONS

THUMBTURN HOLE
7/8" DIAMETER
DRILL ONLY IF THUMBTURN
IS ON THIS SIDE

CL OF ANSI STRIKE
CL OF LOCK

THROUGH BOLT HOLE
3/8" DIAMETER
CL OF LEVER / KNOB

LEVER / KNOB HOLE
7/8" DIAMETER
DRILL ONLY IF LEVER / KNOB
IS ON THIS SIDE


THROUGH BOLT HOLE
3/8" DIAMETER

RESPONSIBILITY:

DOOR AND FRAME FABRICATORS
ARE RESPONSIBLE FOR PROVIDING
ADEQUATE CONSTRUCTION OR
REINFORCEMENTS FOR PROPER
INSTALLATION OF HARDWARE

NOTE:

**BACKSET MEASURED FROM
CENTER OF DOOR EDGE**

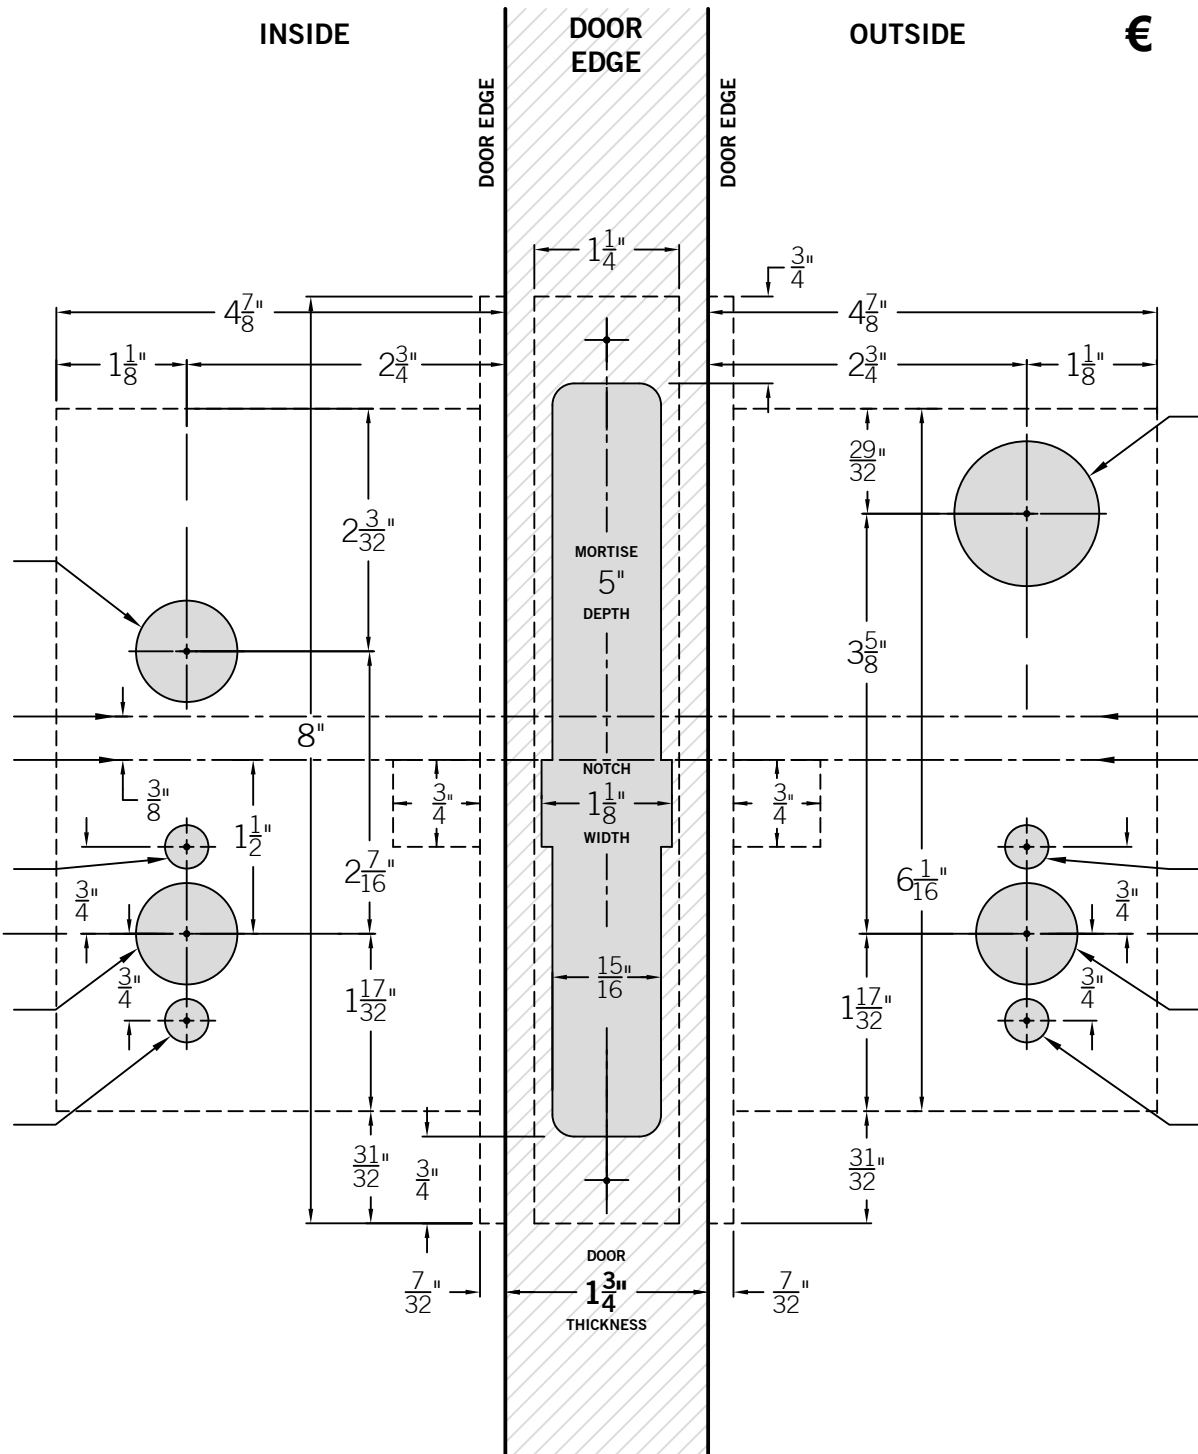


STRIKE/DUST BOX DETAIL
FOR WOOD DOORS/FRAMES

SERIES SML MORTISE STRIKE
UNIVERSAL STRIKE
(FOR FUNCTIONS A, B, C, E, H, T, CRX)

NOTE: STANDARD LIP TO CENTER = 1 1/4" (M1)

M2 = 1 1/8"; M3 = 1 3/8"; M4 = 1 1/2"
M5 = 1 3/4"; M6 = 2"; M7 = 2 1/4"
M8 = 2 1/2"; M9 = 2 3/4"; M10 = 3"

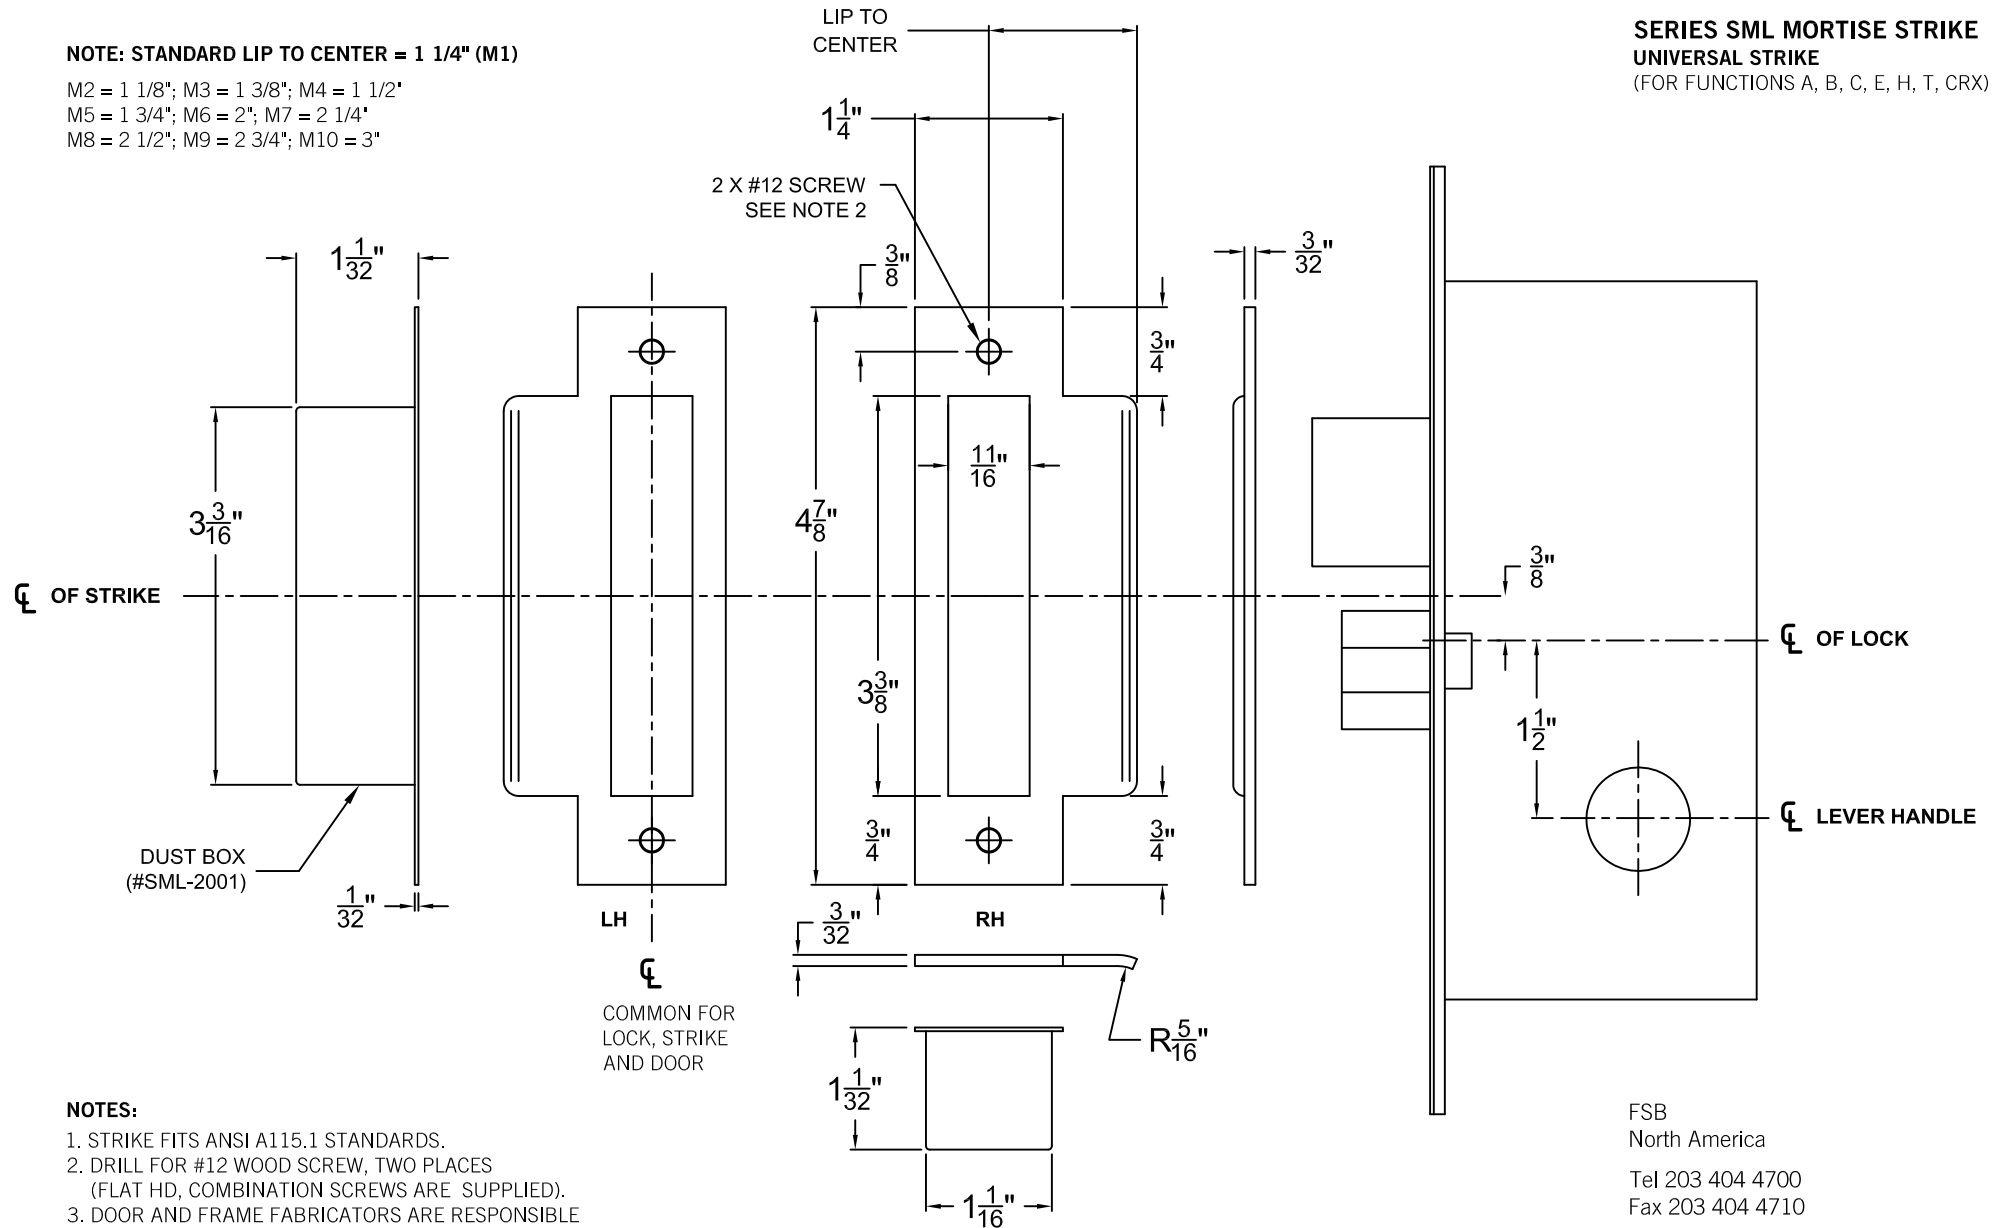

NOTES:

1. STRIKE FITS ANSI A115.1 STANDARDS.
2. DRILL FOR #12 WOOD SCREW, TWO PLACES (FLAT HD, COMBINATION SCREWS ARE SUPPLIED).
3. DOOR AND FRAME FABRICATORS ARE RESPONSIBLE FOR PROVIDING ADEQUATE CONSTRUCTION OR REINFORCEMENT FOR PROPER INSTALLATION OF HARDWARE.

FSB
North America

Tel 203 404 4700
Fax 203 404 4710

www.fsbna.com
info@fsbna.com